

## MIXER

There is no on/off button. You turn it on/off by plugging in/out the power cord.

**1** = Speaker input **2** = Speaker power **3** = Mixing desk power  
**4** = Extension cord that goes to the socket **5** = Cable to PC/Pod  
**6** = Audio to PC/Pod **7** = Master audio



## CABLES

The equipment should always be left in this setup when you leave the Scenehouse. The cables should be coiled and hung neatly on the side of the mixing desk.


If you need longer speaker cables, there is an extra set in the cupboard under the stairs that can be swapped with the fixed ones.

The long cables should always be hung in the cupboard after use and the fixed cables reconnected.



## SPEAKERS

Connect as shown in the picture.  
 Always keep the power buttons on "on".

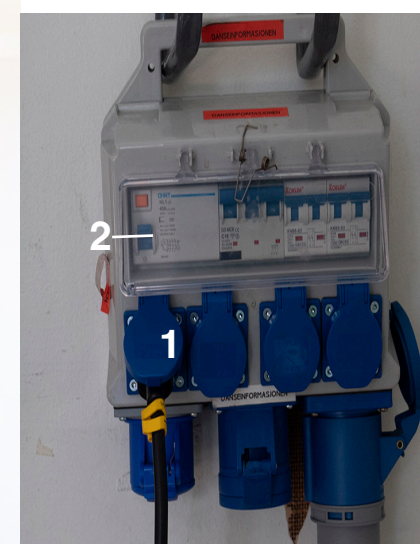

## POWER SUPPLY

The extension cord from the equipment should go to the connection box in the kitchen. **(1)**

Turn the equipment on and off by turning the connection box on and off **(2)**

On = up  
 Off = down